 
 


# Camera Nomenclature

## Front

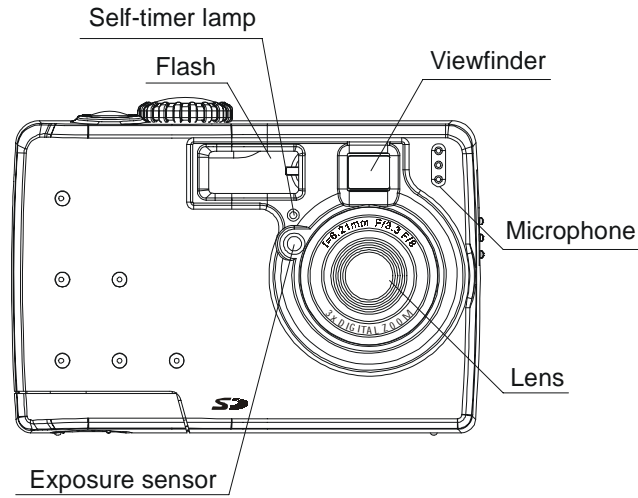 


## Back

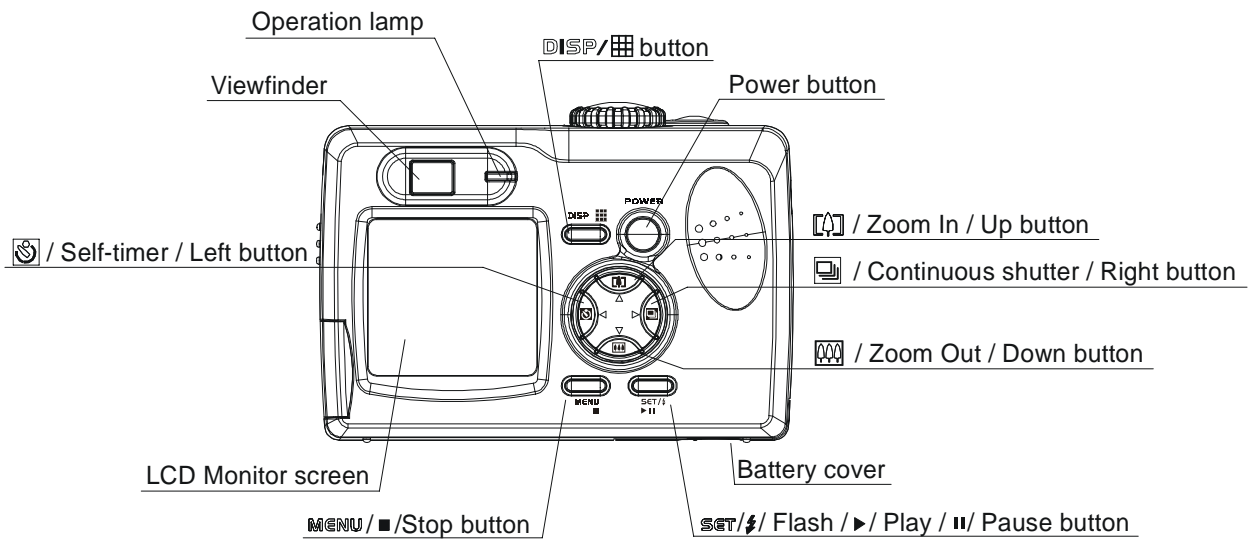 


## Battery Installation

1. Turn camera upside-down.
2. Open the battery cover by pushing and sliding into the side.

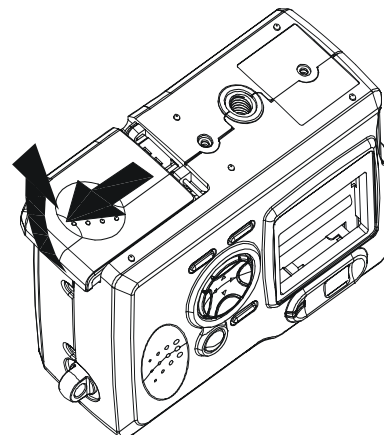

3. Check inscription on battery chamber for correct negative/positive installation.
4. Install 2-AA alkaline batteries.
5. Close battery cover.

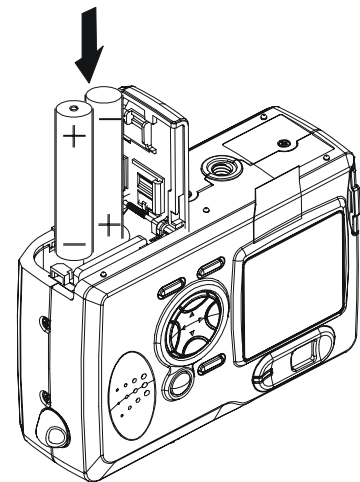 


## Camera Working Mode

You can select the camera's working mode by using the Mode dial located on the top of the camera. There are 4 working modes in this camera.

### Auto Photo Mode ( )

In this mode, the camera will automatically set the exposure and white balance according to your shooting environment.

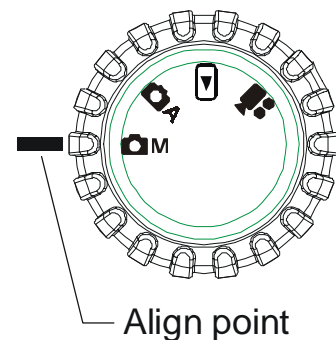

### Manual Photo Mode ( )

You can manually set the exposure and white balance before shooting.

### Playback Mode ( )

1. Replay or delete images from the camera memory storage.
2. Print images directly to a connected printer.

 
### Video Mode ( )

1. Use this mode to record movies.
2. You can also manually set the exposure and white balance before recording the video.

## Taking Pictures

There are two Camera Working Modes for you to take a picture. In the Auto Mode, all you have to do is to press the shutter button and let the camera judges the environment conditions for you. In the Manual Mode, you can manually adjust the exposure and set the white balance based on different environment condition.

1. Select the Mode dial to Auto ( ) or Manual ( ).
2. Press the POWER button to power on the camera.
3. Press Capture Button completely down to take a picture.

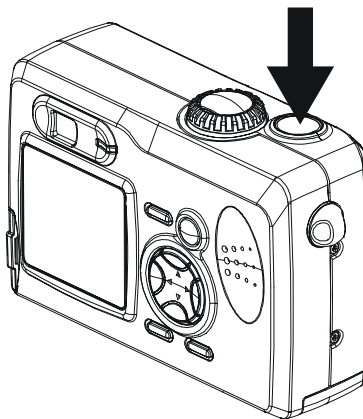

## Adjusting the Exposure And Setting the White Balance

You can manually set the exposure value (EV value) and the white balance mode to match different type of light source. Please refer to Page 20 of user's manual.

Exposure Compensation:

EV Value Range: -2EV to +2EV

 




Steps: 1/3V





White Balance Modes:

- **AUTO** - Normal conditions  
(camera adjusts white balance automatically)
- - Outdoor daylight
- - Cloudy
- - TUNGSTEN (Indoors, illuminated by tungsten lighting)
- - FLUORESCENT (Indoors, illuminated by fluorescent lighting)
- - converts images to black and white





## Changing the Picture Resolution and Quality (Compression)

You can change the resolution and quality setting of images you will record. Please refer to page 22 of user manual.

Display Icon	Resolution 
	2272 x 1704 (Large)
	2048 x 1536 (Medium-1)
	1600 x 1200 (Medium-2)
	640 x 480 (Small)

Display Icon	Quality 
	5X
	8X
	12X



## Flash available in each shooting mode

Mode	Auto	Manual	Video
	<input type="radio"/>	<input type="radio"/>	X
	<input type="radio"/>	<input type="radio"/>	X
	<input type="radio"/>	<input type="radio"/>	X
	<input type="radio"/>	<input type="radio"/>	X

○ : Available

X : Not Available

## Using Digital Zoom

When the LCD screen is on in Auto or Manual Mode, you can zoom in the subject by using UP/DOWN button (/) before the image is taken. Please refer to page 26.

## Recording Video images

This camera performs video-recording function.


Please refer to page 28 of user's manual.

---

## Reviewing Your Pictures and Videos

### Viewing Pictures

Select the Mode dial to Playback (  ) to view pictures and images.

1. You can view up to 9 images at a time by using the THUMBNAIL function (  ).  
Please refer to page 31 of user's manual.
2. In Playback mode, use RIGHT/LEFT button to scroll the images.
3. When viewing a single image in Playback Mode, you can magnify the image you selected by using UP/DOWN button. The scale of magnification is x1.0 ~ x4.0.  
Please refer to page 32 of user's manual.

### Deleting Pictures

You can delete single or all images in Playback mode. Please refer to page 33 of user's manual.

### Running a Slide Show

View your pictures on the camera LCD screen by using the Slide Show feature. The pictures appear for a period of 5 sec. or 10 sec. upon the time you set. Please refer to page 37 of user's manual.

### Downloading Images to a Computer

There are two ways to download images taken with the camera to a computer.

1. Directly from the SD card. Please refer to page 44 of user's manual.
2. Connect the camera to a computer via the USB cable. Please refer to page 45 of user's manual.
  - A. If operating system is Windows 98/98SE, make sure that you install the USB driver that comes on the bundled CD-ROM first. Please refer to Page 45 and 48 of user's manual.
  - B. Connect the supplied USB cable to the computer's USB port.
  - C. Turn on your camera, and your computer will detect the camera and then automatically complete the camera installation.
  - D. A "Removable Disk" will be displayed under "My Computer".
  - E. Double-click the "Removable Disk" and you will see a "DCIM" folder.
  - F. All the images stored on your camera memory storage are transferred to the "DCIM" folder.

# Quick Start Guide

## Digital Still Camera

3.2 Mega Pixel

